Truffle Quick Install Guide

STEP1: Plug in the power cord and turn on the Truffle. Wait a few minutes to reboot.

STEP2: Connect your laptop (or your LAN) to the LAN1 or LAN2 port of the Truffle.

STEP3: Connect your modem to WAN1 port and reboot your modem.

STEP4: Using your PC that is connected to the LAN port of the Truffle, go to the URL, 192.168.254.99 via your browser to access the User Interface (pictured below).

STEP5: If your modem is not DHCP and needs configuration click on the Interface number to configure your WAN links.

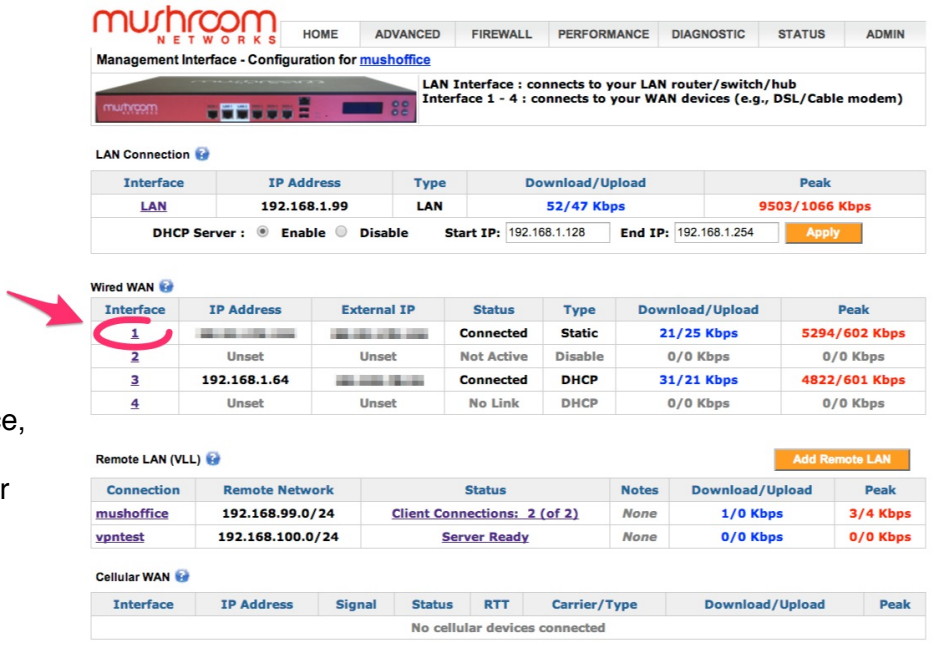

STEP6: If you need further assistance, please create a support ticket via sending a detailed description of your issue to support@mushroomnetworks.com

Copyright 2013, Mushroom Networks, Inc.